

# 8

DIGIT DISPLAY

WALLET CALCULATOR

**UNV-15907**  
Owner's Manual  
**Universal**

## FEATURES

**Large, 8-Digit Display** – big, easy-to-read LCD numbers.

**Four Function Memory** – includes addition, subtraction, recall, and clear.

**Dual Solar/Battery Power** – built-in solar panel extends battery life by powering the calculator in the light.

**Automatic Power Off** – saves battery power by turning off the calculator if it is left unused for about 7 min.

## OPERATING THE CALCULATOR

**ON/C•CE Key** – Power ON / Clear LCD / Clear Entry. Power OFF after a few minutes if no button is pressed. If a result is too big to show in the LCD, the calculator stops and displays **E**. Press **ON/C•CE** to continue.

**Metal Carrying Case** – Protects the calculator wherever you go.

**+/- Key** – Press to change the displayed number from positive (+) to negative (–) or from negative (–) to positive (+). **MINUS** – is displayed when the value is negative.

## PERFORMING CALCULATIONS

**Addition (+)** *Example:*  $6 + 7 = 13$   
Press [6] [+] [7] [=] 13

**Subtraction (–)** *Example:*  $10 - 4 = 6$   
Press [1] [0] [–] [4] [=] 6

**Multiplication (x)** *Example:*  $7 \times 5 = 35$   
Press [7] [x] [5] [=] 35

**Division (÷)** *Example:*  $14 \div 7 = 2$   
Press [1] [4] [÷] [7] [=] 2

**Square Root (√)**  
Calculate the square root of 64  
Press [6] [4] [√] 8

## MEMORY FUNCTIONS

**[M+]** Press to add the displayed number to memory  
**MEMORY** is displayed.

**[M–]** Press to subtract the currently displayed number from memory.

**[MR]** Recall the number in memory.

**[MC]** Clear the memory.

## Percentages (%)

Calculate 6% of 200.  
Press [2] [0] [0] [x] [6] [%] 12

Add 6% tax to a \$20 purchase.  
Press [2] [0] [+] [6] [%] 21.2

Calculate 20% discount from \$150.  
Press [1] [5] [0] [x] [2] [0] [%] 30

## REPLACING THE BATTERY

1. Remove the two screws on the rear panel. Using a flat edge, pry open the rear panel.
2. Slide out the old battery. Insert the new battery with the + side up.
3. Replace the rear panel.

## CARE AND MAINTENANCE

- Keep the calculator dry. If it gets wet, dry it before use.
- Do not use harsh solvents or detergents to clean the unit.
- Do not drop or strike the calculator.